

C L E A N F I R E S Y S T E M

XARALYN®

Manual

Placing finishing frame for built-in units XL and XXL





NOT INCLUDED







1

Placing built-in unit in DIY wall

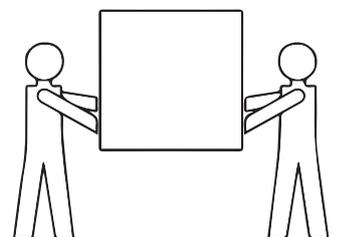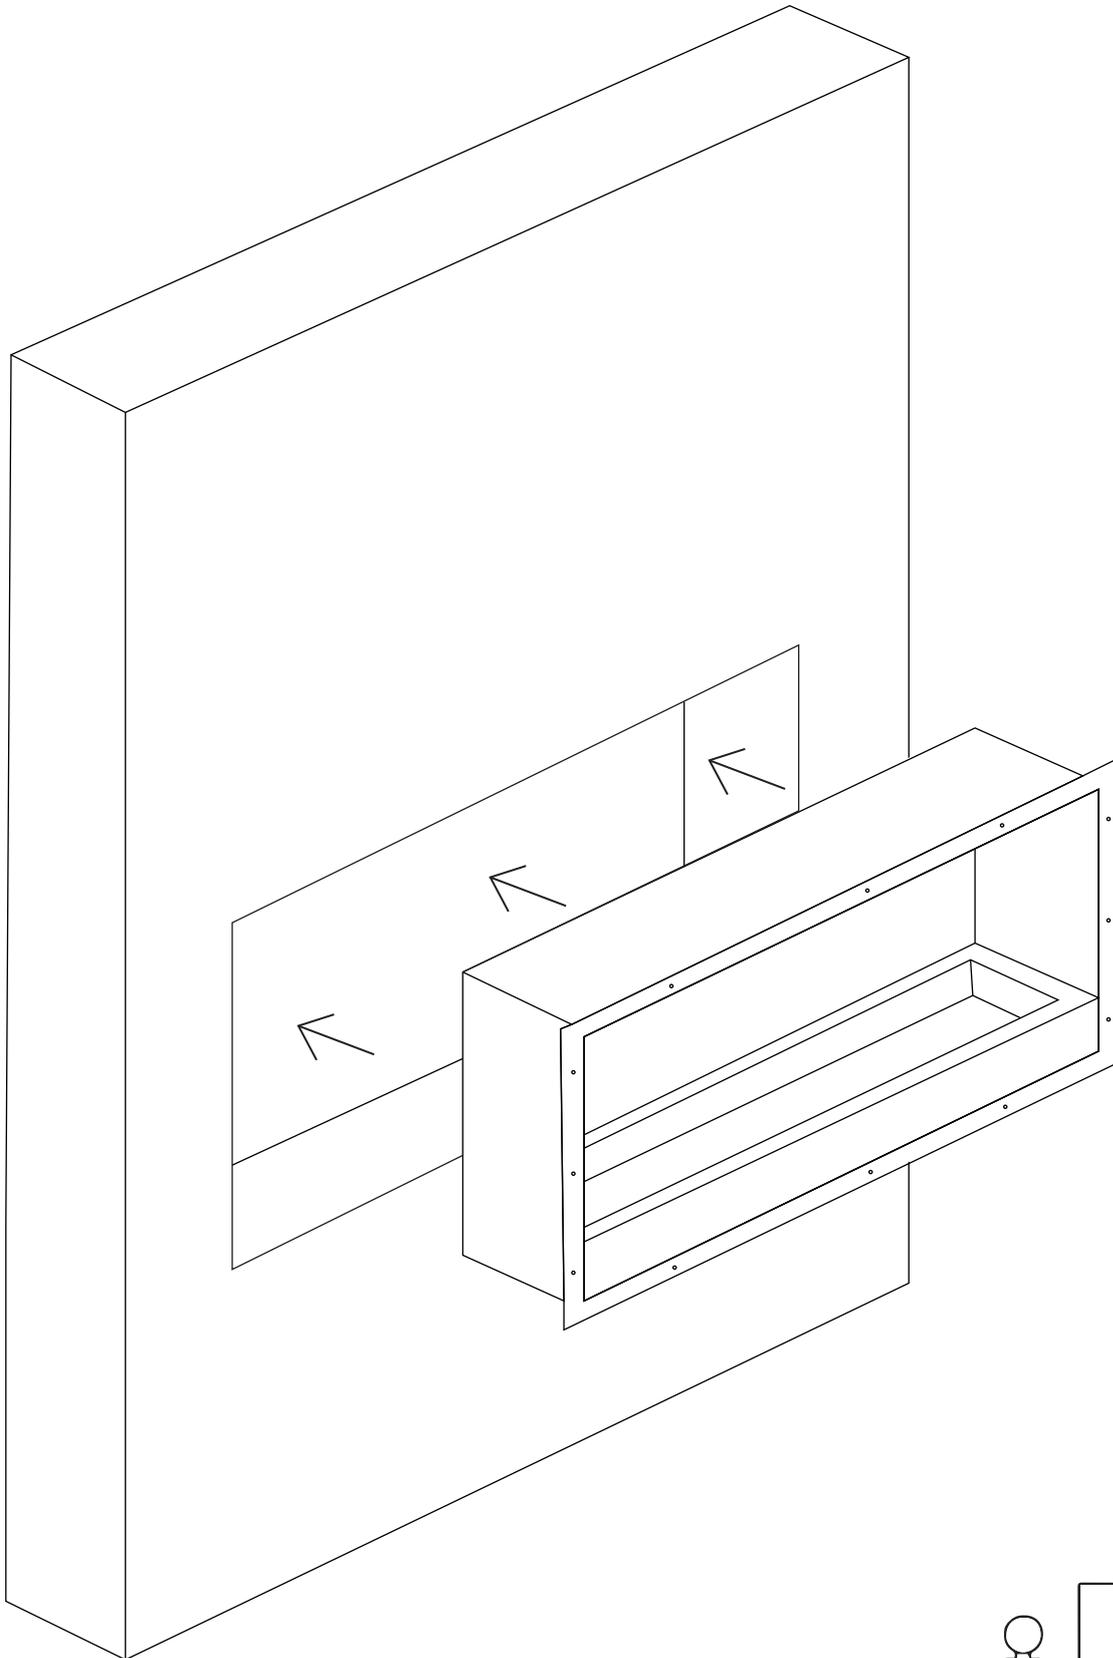






2

Mounting the unit with screws

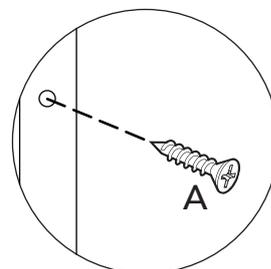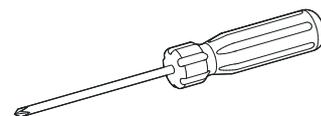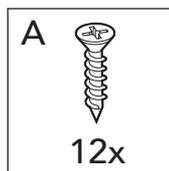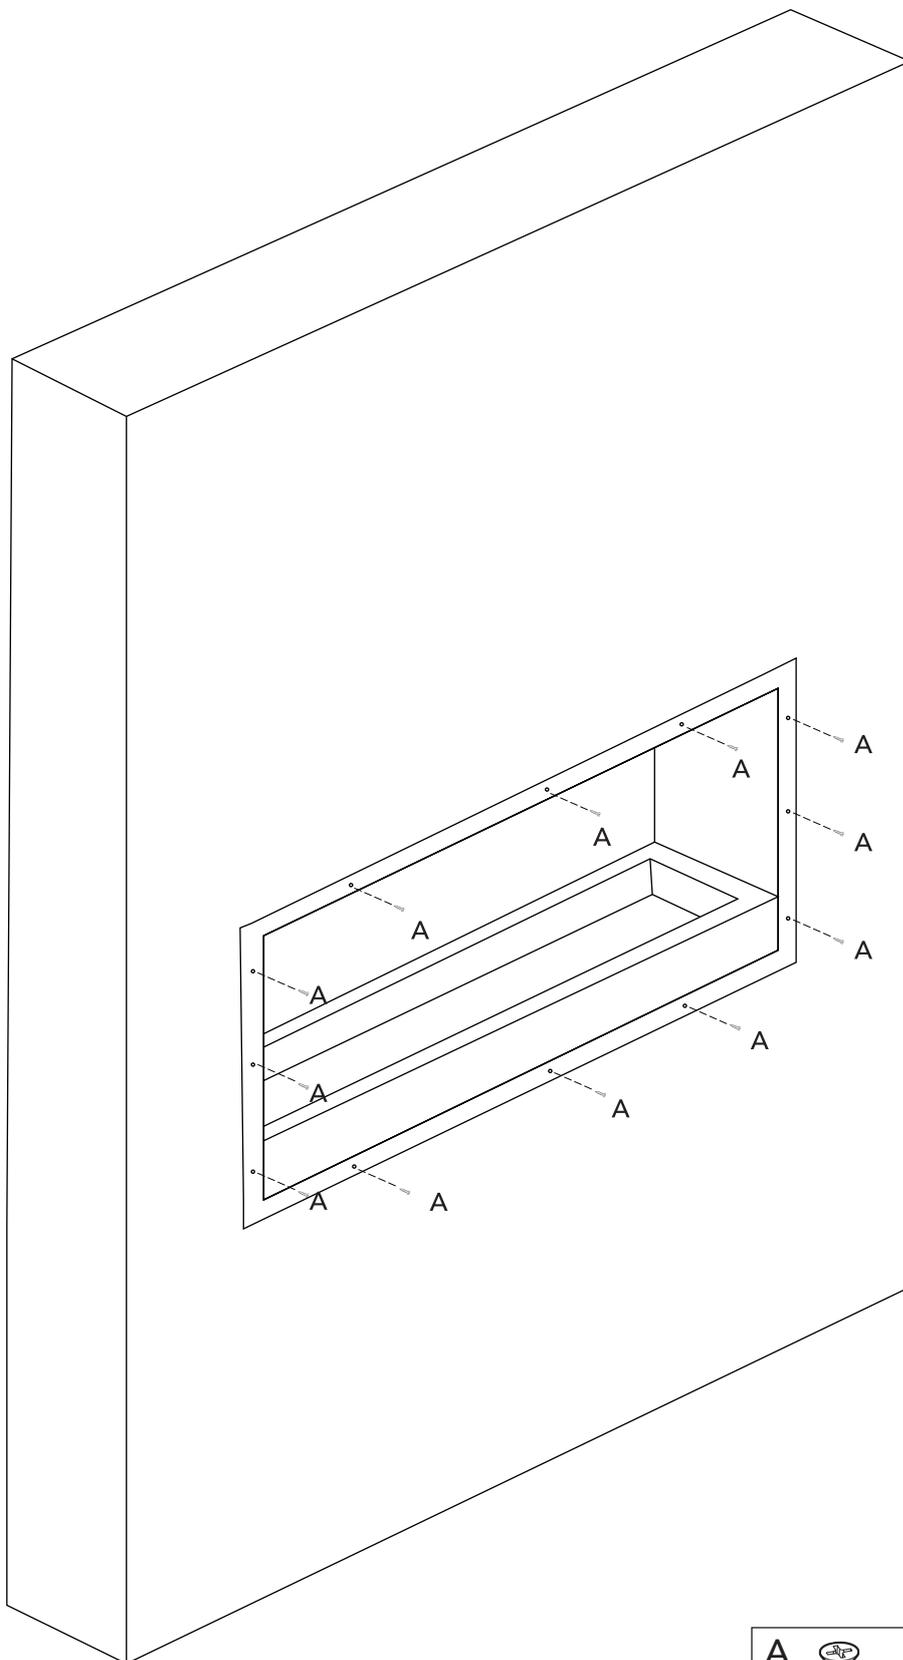


3

Drill two holes above the frame

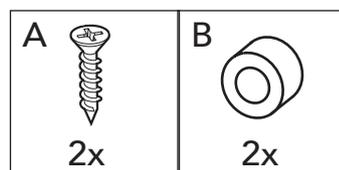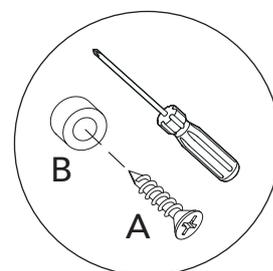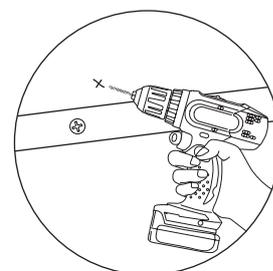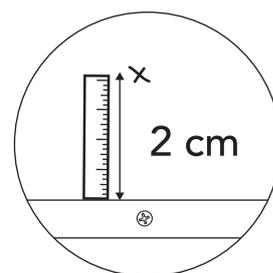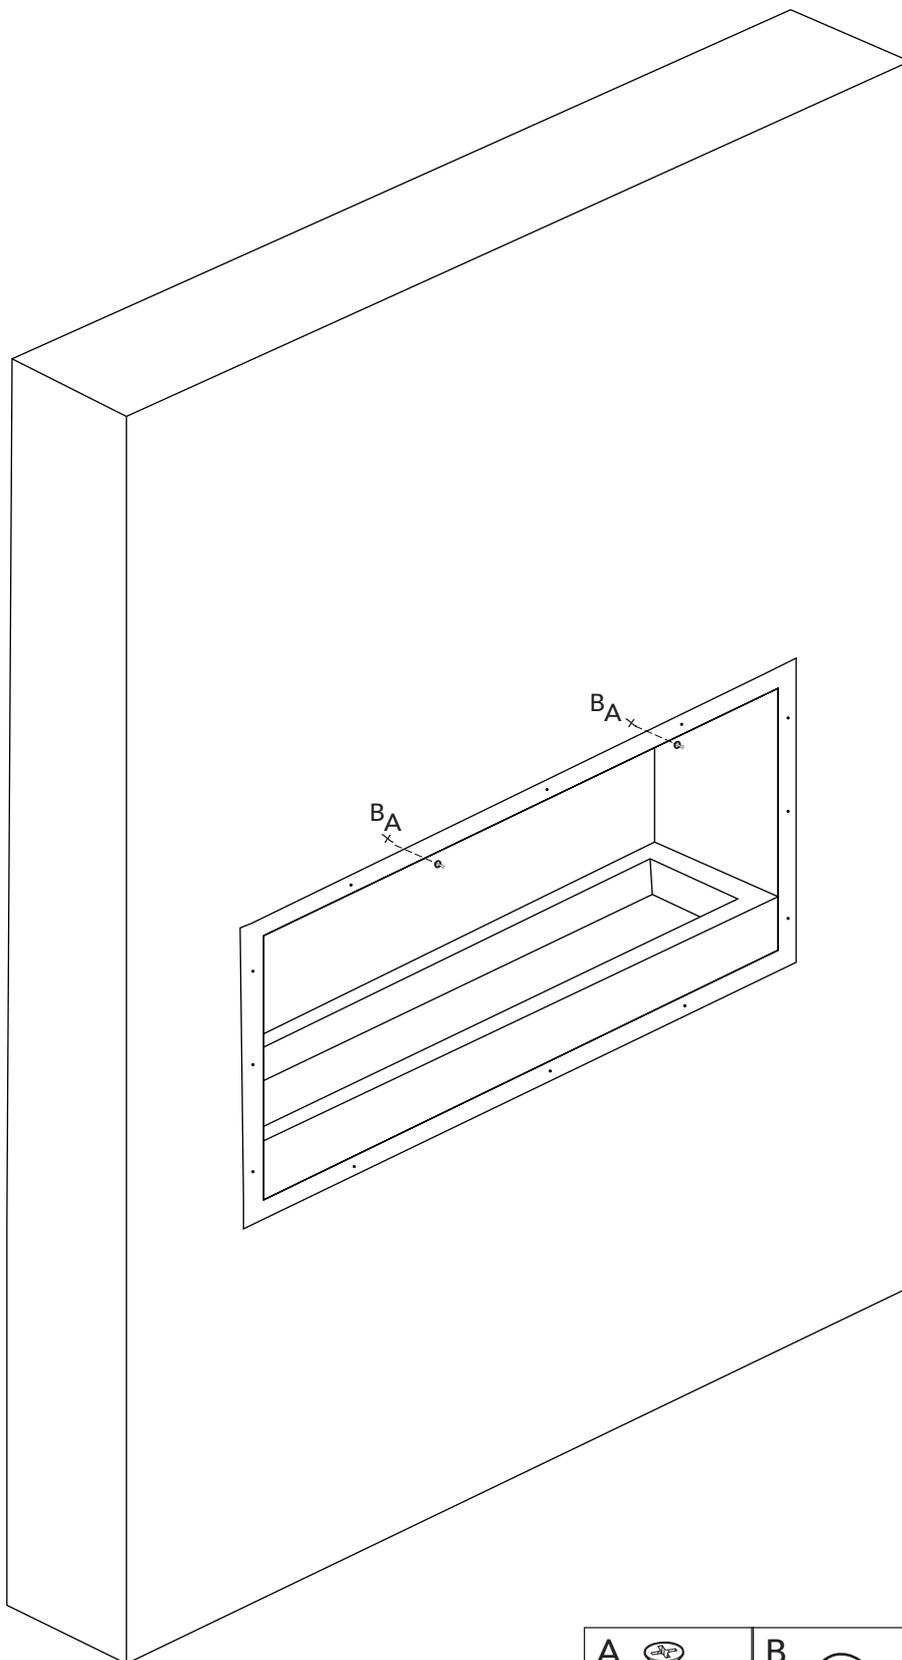

4

Place finishing frame with magnets

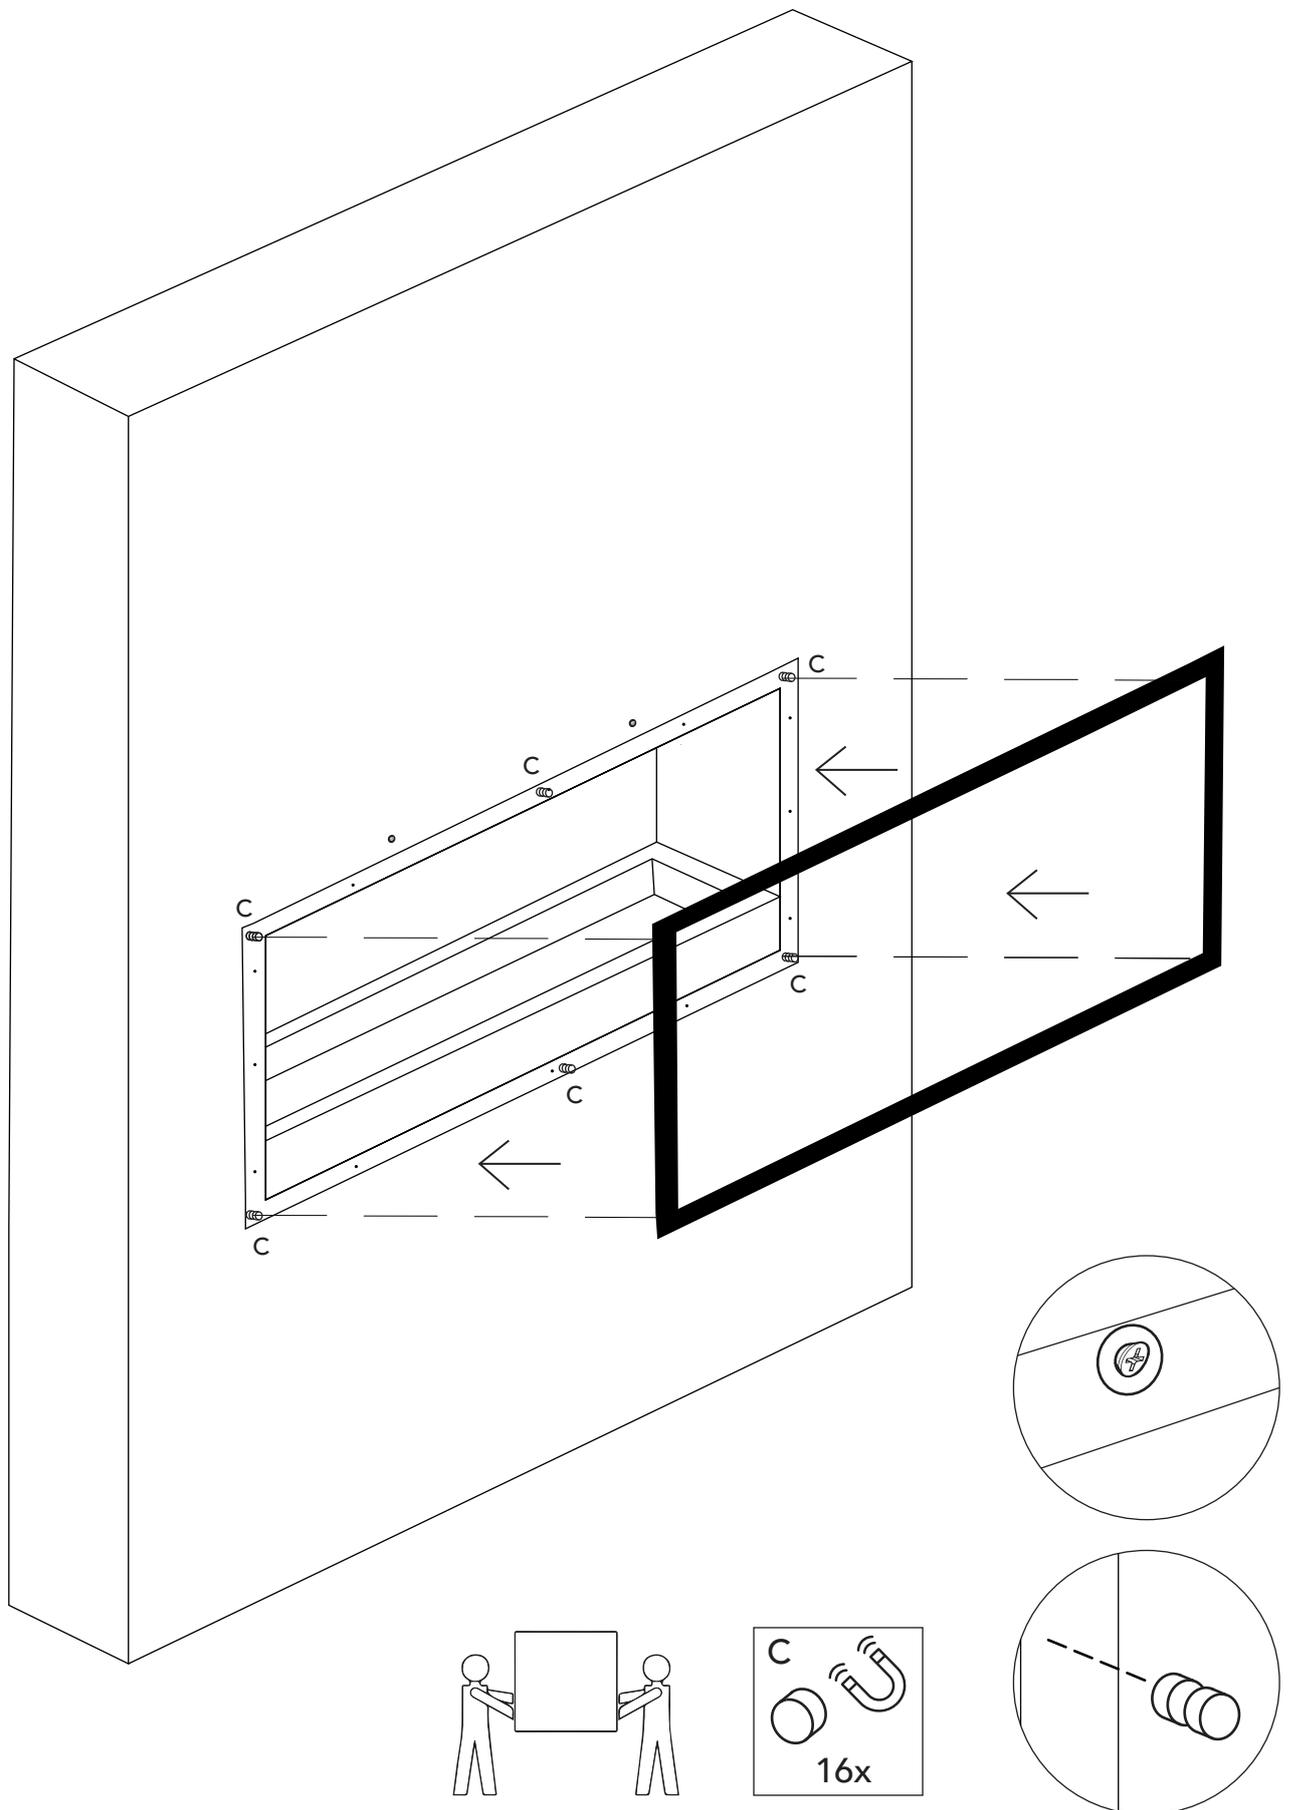

5

Place bioethanolburner in the unit and enjoy the fire

